

SOLAR FLOW HEATERS LIGHTING INSTRUCTIONS

Three Easy Steps:

Step #1

- Close the L.P. cylinder valve.
- Depress and turn the gas control knob clockwise to the OFF position.
- Then wait 5 seconds.

Step #2

- Open the cylinder valve and turn the gas control knob COUNTER-CLOCKWISE to the pilot position.
- Depress the gas control knob and push the ignition button located below the gas control knob for 30 to 60 seconds until the pilot light is ignited.

Step #3

- Turn the gas control knob COUNTER-CLOCKWISE to the ON position and wait for 1 to 2 minutes to make sure the pilot light stays on.

If the pilot fails to remain lit or becomes extinguished, repeat steps 1 – 3. Stick matches are recommended.

PLEASE NOTE: IF YOU HAVE A PROBLEM WITH YOUR HEATER CALL OUR OFFICE IMMEDIATELY AT (650) 365-3050. AFTER REGULAR BUSINESS HOURS FOLLOW THE PROMPTS TO CONTACT AN AFTER-HOURS ON-CALL STAFF MEMBER. A REPRESENTATIVE WILL CALL YOU BACK.

HEATER RENTALS ARE NON-REFUNDABLE. WE ARE NOT RESPONSIBLE FOR THE EFFECTS OF WEATHER ON PERFORMANCE OF THIS EQUIPMENT. RAIN AND WIND CAN CAUSE HEATERS TO NOT STAY LIT. DO NOT TRANSPORT OR LAY HEATER ON ITS SIDE OR IT MAY BE DAMAGED. DAMAGES RESULTING IN MISUSE WILL BE THE RESPONSIBILITY OF THE LESSOR / RENTAL CUSTOMER.